











How to use remote

Using and Buttons

Operate this TV's functions and settings basically using  and  buttons.



1. Select the item on the screen using the  buttons.
2. Press the  button to apply the selection.

Using RETURN and Colour Buttons

To return to the previous screen

 
Press the RETURN button.

To operate functions using the colour buttons

The colour buttons and available functions are indicated at the bottom of the screen.

Press the colour button that corresponds to the function you want to use.

The available functions differ depending on the screen.

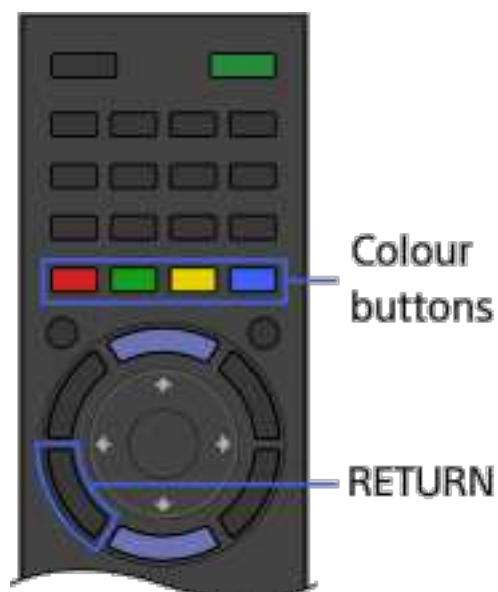

Related Information

- [Home Menu screen](#)

- [How to use the i-Manual](#)

© 2013 Sony Corporation

[▶ List of Contents](#)

How to use i-Manual

Searching for Information

This i-Manual explains how to use all functions. In the main page of i-Manual, you can select the desired method to search for information.



1. **Table of Contents:** Searches from a title list.
2. **Troubleshooting:** Searches for solutions to problems.
3. **Index:** Searches by function/feature name.

Use the buttons to switch between the **1/2/3** tabs.

 
Tips

- The supplied paper manual contains important information such as cautions and operating instructions to prevent accidents. Read the supplied paper manual thoroughly for safe use.

Steps

Procedure example: “Table of Contents” search

1. In the main page of this manual, select the “Table of Contents” tab using the buttons.
2. Select a title on the left of the screen using the buttons, then press the button.
The titles on the right of the screen change according to the title selected on the left of the screen.

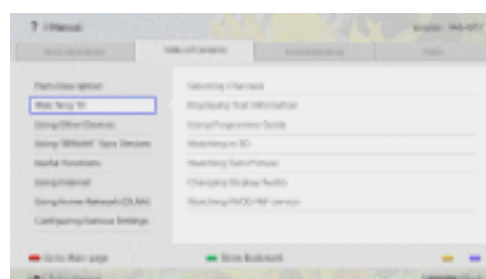

3. Select a title on the right of the screen using the buttons, then press the button.
The page of the selected title appears.

4. Press the **▶** button to proceed to the next page.
To return to the previous page, press the **◀** button.



To go to the main page

Press the corresponding colour button indicated at the bottom of the screen.

To close the i-Manual

Press the i-MANUAL button.

If you press the i-MANUAL button again, the previously displayed page reappears. If you press the i-MANUAL button after the TV is turned off, the main page appears.

Displaying the Page Again While Operating the TV

Press the i-MANUAL button repeatedly to toggle between the TV screen and previously displayed page of the i-Manual. In this way, you can refer to the i-Manual while operating the TV.



Saving Frequently Viewed Pages (Bookmark)

You can save frequently viewed pages in this manual using a colour button. For details on how to bookmark, press the colour button that corresponds to [Show Bookmark] at the bottom of the screen.

Home Menu screen

Overview


The Home Menu, which can be displayed by pressing the HOME button, contains various categories.

Displays content such as TV programme, external inputs and function settings, divided into categories. You can first select the category, then select a desired programme or external input, or change settings, such as picture quality. The number of categories and available items vary depending on your region/country.



Categories in the Home Menu

[Featured]

Displays recommend information and current information about available applications and content. If there is no network connection, or the [Featured] display setting is set to [Settings] →  [System Settings] → [Home Menu] → [Featured Display] → [Off], the [Featured] category will not be displayed. (This function is available depending on your region/country.)

[History]

Allows you to choose from [History], such as a channel, input, or application that you watched and used recently.

If the History display setting is set to [Off], the [History] category will not be displayed.

[TV]

Allows you to choose from a list of TV channels, or a programme guide. (Programme guide is available depending on your TV model or region.)

Also, enables timer recordings to a connected USB HDD devices, and selection of recorded content play. (This function may not be available depending on your model/region/country.)

A list of channels registered as favourites in the TV category are displayed.

[Applications]

Launches applications that require an Internet connection. Although most applications need an Internet connection, for Media Player it is not necessary.

A list of applications registered as favourites in the Applications category are displayed.

If you select [All Applications], all applications are displayed as a list. You can register your

favourite applications to [Applications] in the Home Menu by selecting a favourite application icon and pressing the OPTIONS button. You can enjoy more applications if you connect your TV to the Internet. (This function is available depending on your region/country.)

[Connected Devices]

Enables selection of devices connected to the TV.

[Settings]

Provides settings (e.g. picture settings, sound settings, key tone setting) that allow you to customise your TV.

Steps

1. Press the HOME button.
The Home Menu appears.



 
2. Select the category using the **▲/▼** buttons.
(Illustration example: When selecting the [Settings] category.)



3. Select the item using the **◀/▶** buttons, then press the **⊕** button.
(Illustration example: When selecting **👤** [Display].)



4. In the displayed screen, perform the operation using the **▲/▼/◀/▶** and **⊕** buttons.
(Illustration example: When selecting [Picture] using the **▲/▼** and **⊕** buttons.)

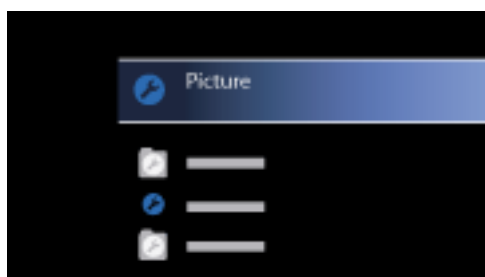


To return to the last viewed source, press the HOME button twice.

Tips

- The items you can select may vary depending on the situation.
- Unavailable items are greyed out or not displayed.




Selecting channels by the PROG +/- buttons

Overview

You can find and tune a desired programme in the programme list easily with the PROG +/- buttons. To enable this feature, set [Settings] →  [System Settings] → [Fast Zapping] to [On]. If you set to [Off], the PROG +/- buttons work just to toggle through channels.




Steps

1. Press the PROG +/- buttons.
2. Press the MEDIA or  buttons to select the desired category type.
3. Select the desired programme from the programme list using the PROG +/- or  buttons, then press the  button.


To close this screen, select a programme or press the RETURN button.

To change the settings later.

Press the HOME button, select [Settings] →  [System Settings] → [Fast Zapping], then the desired option.

Available Options

[Auto Programme Selection]

[On]: The TV automatically switches to the selected content after a certain period of time, even if the  button is not pressed.

[Off]: The TV switches to the selected content only when the  button is pressed.

When launching [Fast Zapping], you can set up this option by pressing the OPTIONS button.

[Fast Zapping]

[On]: When the PROG +/- button is pressed, [Fast Zapping] is launched.

 
[Off]: When the PROG +/- button is pressed, the channel is switched one by one as usual.

While watching TV, you can set up this option by pressing the OPTIONS button.

Selecting channels from the Home Menu


Overview


You can select channels from the TV channel list in the Home Menu.

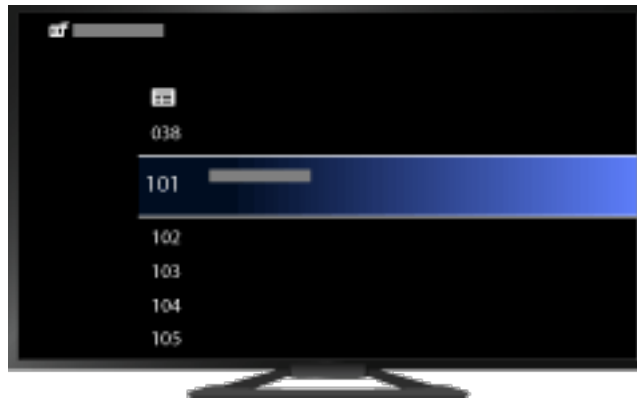


Steps

 1. Press the HOME button, then select [TV] using the **▲/▼** buttons.

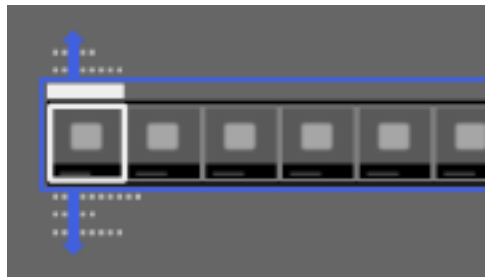

 2. Select  [TV Channel List] using the **◀/▶** buttons, then press the **⊕** button.

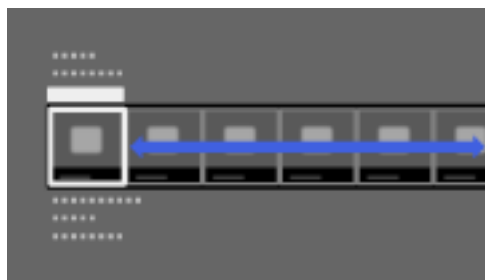

3. Select [Digital TV], [Analogue TV] or [Preferred Satellite]/[General Satellite] using the **▲/▼** buttons, then press the **⊕** button.
4. Select the desired channel from the TV channel list using the **▲/▼** buttons, then press the **⊕** button.

Using Programme Guide

Overview

You can quickly find your preferred programmes and the detailed programme information. You can also search programmes by genre, register your preferred programmes, etc. (This function is available only for digital broadcasts, and depends on your model/region/country.)



Steps

1. Press the GUIDE button to display the digital programme guide.



2. Select the programme to watch using the /// buttons, then press the button.



To close the digital programme guide, press the GUIDE button.

To search for programmes by genre


Press the OPTIONS button, select [Programme Genre List], the desired genre, then the desired programme.

To register your preferred channels

Press the OPTIONS button, select [Favourites Set-up], the desired category, then follow the on-screen instructions to register channels.

 
To set reminders

You can set reminders for future programmes. After selecting a future programme in the guide, select [Reminder].

To list programmes with reminders set, press the HOME button, then select [TV] →  [Recordings] → [Timer List].

(This function may not be available depending on your model/region/country.)

About the Digital Programme Guide Screen

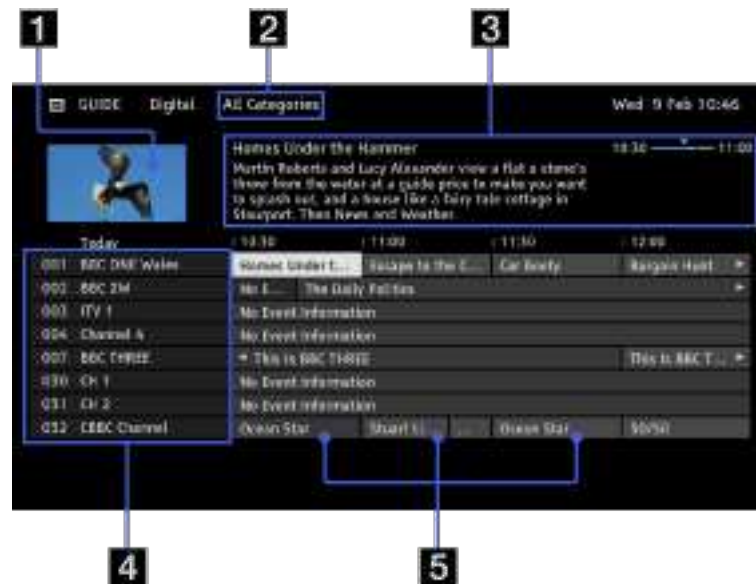

1. Video window

2. Displays the last viewed programme* before you entered the guide.

* May not be displayed depending on your region/country.

3. Category

Indicates category name (e.g. [Guide Favourites 1]) which contains all channels corresponding to the category.

4. Information box

Shows information about the highlighted programme.

5. Channel information

Displays a channel title and number for a broadcaster.

6. Programme listing grid

7. Enables selection of a programme to watch or to be set as a reminder*.

* The availability of setting as a reminder, depends on your region/country.